Silverstar “Cocktail-JAM” Hybrid Kit powered by Roland

クイックスタートガイド

TAMA Roland

本マニュアルは、Silverstar “Cocktail-JAM” Hybrid Kit のクイックスタートガイドです。本製品の性能を十分に発揮し、安全にご使用頂くために、それぞれに同梱されている取扱説明書を必ずお読みください。

1. Cocktail-JAM ドラムキットの組み立て

Cocktail-JAM ドラムキットに同梱されている取扱説明書を参考に、Cocktail-JAM ドラムキットを組み立ててください。

トリガーとモジュールを収納できる専用バッグが付属されています。10” タムに収納してお使いください。

2. トリガーとモジュールの取り付け

RT-10Tトリガーを 16”バスドラムのフープに、RT-10S トリガーを12”スネアドラムの打面フープに、それぞれ取り付けます。

RT-10T
バスドラム用トリガー

RT-10S
スネアドラム用トリガー

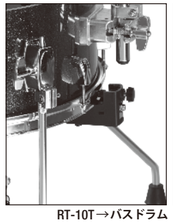

RT-10T→バスドラム

RT-10S→スネアドラム

モジュールにマウンティングプレートを取り付け、クランプ (Cocktail-JAM ドラムキットに同梱されています) を使って連結パイプに取り付けます。

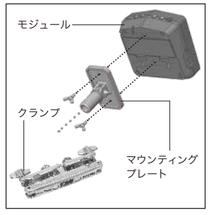

3. モジュールの接続

下図に従って、モジュールとトリガー、モニター、電源を接続してください。バスドラムのRT-10T が「TRIG IN 1」に、スネアドラムの RT-10S が「TRIG IN 2」に接続されている事を確認してください。

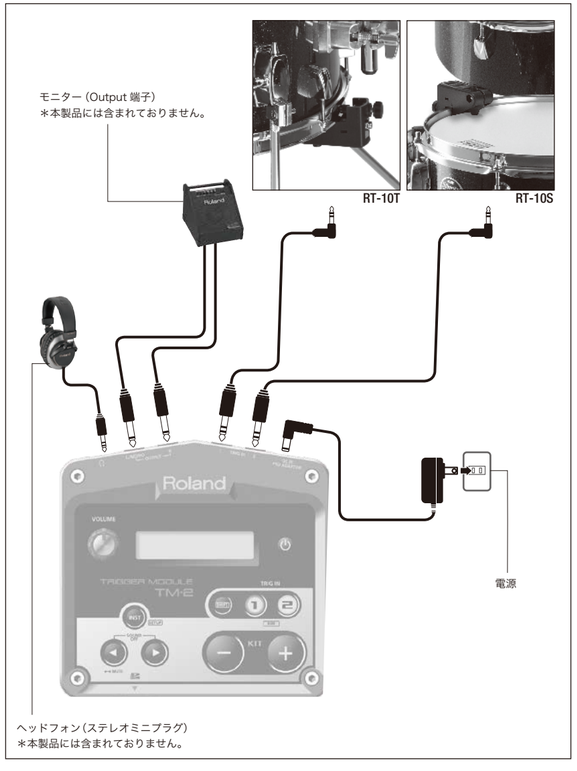

4. Kit No.51-60 を選択

電源ボタンを押してモジュールを起動させてください。このモジュールはあらかじめ Cocktail-JAM ドラムキットに最適なセットアップが設定されております。「+」ボタンでKIT No.51-60をお選びになり、演奏をお楽しみください。 詳細につきましては、各機器に同梱されている専用マニュアルをご参照ください。

注意 Cocktail-JAM 用の特別セットアップは、モジュールの「Factory Reset」機能で初期化する事により消失されます。

Cocktail-JAM ドラムキット専用設定内容

TRIGGER SETUP

	TRIG IN 1		TRIG IN 2	
	1H	1R	2H	2R
Input	PADx2		HEAD&RIM	
Type	RT-10T	BT-1 SENS	RT-10S	
Sens	5	14	8	
Threshold	18	18	15	

KIT 51 <TAMA CJAM01> "Gate"

	1H	1R	2H	2R
INST#	123	068	101	154
INST	Dance Lo	Tambrine 1	Gate Clap	Dist Gate
Level	100	100	80	80
Dynmcs	LOUD2	LOUD1	LINEAR	LINEAR
Pitch	0	20	0	0
EffectSend	OFF	OFF	ON	OFF

*Effect Type: COMP

KIT 52 <TAMA CJAM02> "Boomy Low"

	1H	1R	2H	2R
INST#	108	053	107	097
INST	Boom Out	TR-808 OHH	Super Low	Live Clap
Level	100	100	70	100
Dynmcs	LOUD2	LOUD1	LINEAR	LOUD1
Pitch	0	20	90	20
EffectSend	OFF	OFF	ON	OFF

*Effect Type: REVERB

KIT 53 <TAMA CJAM03> "Electro"

	1H	1R	2H	2R
INST#	116	061	045	069
INST	DanceHiLo2	ReverseCym	ElecTom Hi	Tambrine 2
Level	100	80	95	100
Dynmcs	LOUD1	LINEAR	LINEAR	LINEAR
Pitch	0	0	10	0
EffectSend	ON	OFF	ON	ON

*Effect Type: FLANGER (Rate: 70)

KIT 54 <TAMA CJAM04> "Stack Cymbal"

	1H	1R	2H	2R
INST#	060	058	062	095
INST	StackedCym	Noise HH	ElectroCym	TR-808Clap
Level	100	100	85	90
Dynmcs	LOUD1	LOUD1	LINEAR	LINEAR
Pitch	-30	0	0	30
EffectSend	OFF	OFF	OFF	ON

*Effect Type: DELAY

KIT 55 <TAMA CJAM05> "Natural"

	1H	1R	2H	2R
INST#	002	063	128	041
INST	Small K	Cowbell 1	LoudSteel	XStick 2
Level	100	100	80	100
Dynmcs	LOUD1	LINEAR	LINEAR	LOUD1
Pitch	0	0	0	0
EffectSend	ON	OFF	ON	OFF

*Effect Type: COMP

KIT 56 <TAMA CJAM06> Modified from Preset Kit 13 "Dist Hop"

	1H	1R	2H	2R
INST#	118	118	153	153
INST	DistImpact	DistImpact	Dist Hi	Dist Hi
Level	80	82	68	70
Dynmcs	LINEAR	LINEAR	LINEAR	LINEAR
Pitch	-53	-24	-35	-19
EffectSend	ON	ON	ON	ON

*Effect Type: EQUALIZER

KIT 57 <TAMA CJAM07> Modified from Preset Kit 32 "DubStep"

	1H	1R	2H	2R
INST#	009	061	029	030
INST	DubStep K	ReverseCym	DubStep S1	DubStep S2
Level	100	75	95	98
Dynmcs	LINEAR	LINEAR	LINEAR	LINEAR
Pitch	0	120	0	0
EffectSend	ON	ON	ON	ON

*Effect Type: REVERB

KIT 58 <TAMA CJAM08> Modified from Preset Kit 34 "HipHop"

	1H	1R	2H	2R
INST#	010	098	032	033
INST	HipHop K	Club Clap1	HipHop S1	HipHop S2
Level	100	92	95	97
Dynmcs	LINEAR	LINEAR	LINEAR	LINEAR
Pitch	0	0	0	-2
EffectSend	ON	ON	ON	ON

*Effect Type: REVERB

KIT 59 <TAMA CJAM09> Modified from Preset Kit 44 "Cymbals"

	1H	1R	2H	2R
INST#	060	074	059	059
INST	StackedCym	Shaker	Splash Cym	Splash Cym
Level	100	100	90	97
Dynmcs	LINEAR	LOUD1	LINEAR	LINEAR
Pitch	0	0	0	65
EffectSend	OFF	OFF	OFF	OFF

*Effect Type: REVERB

KIT 60 <TAMA CJAM10> Modified from Preset Kit 37 "Timpani"

	1H	1R	2H	2R
INST#	091	092	092	092
INST	Timpani C	Timpani G	Timpani G	Timpani G
Level	98	98	100	100
Dynmcs	LINEAR	LINEAR	LINEAR	LINEAR
Pitch	0	20	0	-20
EffectSend	ON	ON	ON	ON

*Effect Type: REVERB

Silverstar "COCKTAIL-JAM" KIT™

ACOUSTIC & ELECTRONIC HYBRID DRUMS